



11mm Spark Plug Wire Separator Kit

Use the appropriate 2 -, 3 -, or 4 - hole separator at any location on the ignition wires between the distributor and spark plugs to keep wires away from hot engine parts and other potential trouble spots. (NOTE: to achieve a more secure routing formation use Moroso Loom Kits, which include chrome mounting brackets, looms and separators).

Wires simply "snap" into place. Silicone spray lubricant helps ease the wires into the openings. When routing the ignition wires, be sure they clear exhaust headers. Always remove and install ignition wires from the boots, do not pull on the wire.

*For Technical Assistance, Call Moroso's Tech Line at
(203) 458-0542, 8:30am – 5:00pm Eastern Time*

MOROSO PERFORMANCE PRODUCTS, INC
80 CARTER DR • GUILFORD, CT 06437
Phone: (203) 453-6571 • FAX: (203) 453-6906

Visit Us At www.moroso.com

Rev.A
083101

73160INST



11mm Spark Plug Wire Separator Kit

Use the appropriate 2 -, 3 -, or 4 - hole separator at any location on the ignition wires between the distributor and spark plugs to keep wires away from hot engine parts and other potential trouble spots. (NOTE: to achieve a more secure routing formation use Moroso Loom Kits, which include chrome mounting brackets, looms and separators).

Wires simply "snap" into place. Silicone spray lubricant helps ease the wires into the openings. When routing the ignition wires, be sure they clear exhaust headers. Always remove and install ignition wires from the boots, do not pull on the wire.

*For Technical Assistance, Call Moroso's Tech Line at
(203) 458-0542, 8:30am – 5:00pm Eastern Time*

MOROSO PERFORMANCE PRODUCTS, INC
80 CARTER DR • GUILFORD, CT 06437
Phone: (203) 453-6571 • FAX: (203) 453-6906

Visit Us At www.moroso.com

Rev.A
083101

73160INST



11mm Spark Plug Wire Separator Kit

Use the appropriate 2 -, 3 -, or 4 - hole separator at any location on the ignition wires between the distributor and spark plugs to keep wires away from hot engine parts and other potential trouble spots. (NOTE: to achieve a more secure routing formation use Moroso Loom Kits, which include chrome mounting brackets, looms and separators).

Wires simply "snap" into place. Silicone spray lubricant helps ease the wires into the openings. When routing the ignition wires, be sure they clear exhaust headers. Always remove and install ignition wires from the boots, do not pull on the wire.

*For Technical Assistance, Call Moroso's Tech Line at
(203) 458-0542, 8:30am – 5:00pm Eastern Time*

MOROSO PERFORMANCE PRODUCTS, INC
80 CARTER DR • GUILFORD, CT 06437
Phone: (203) 453-6571 • FAX: (203) 453-6906

Visit Us At www.moroso.com

Rev.A
083101

73160INST



11mm Spark Plug Wire Separator Kit

Use the appropriate 2 -, 3 -, or 4 - hole separator at any location on the ignition wires between the distributor and spark plugs to keep wires away from hot engine parts and other potential trouble spots. (NOTE: to achieve a more secure routing formation use Moroso Loom Kits, which include chrome mounting brackets, looms and separators).

Wires simply "snap" into place. Silicone spray lubricant helps ease the wires into the openings. When routing the ignition wires, be sure they clear exhaust headers. Always remove and install ignition wires from the boots, do not pull on the wire.

*For Technical Assistance, Call Moroso's Tech Line at
(203) 458-0542, 8:30am – 5:00pm Eastern Time*

MOROSO PERFORMANCE PRODUCTS, INC
80 CARTER DR • GUILFORD, CT 06437
Phone: (203) 453-6571 • FAX: (203) 453-6906

Visit Us At www.moroso.com

Rev.A
083101

73160INST