



7000 lb. Wireless Vehicle Scale System
Part No. 67644

For technical support, please contact
PROFORM® directly:


Call our tech team (586)774-2500, 9:00 a.m. to
5:00 p.m. EST.

Email: tech@proformparts.com


PROFORM 7000 lb. Wireless Vehicle Scale (p/n 67644)

Main features and parts

1. Four wireless battery-powered weighing pads and LCD display unit.
2. Each weighing pad has a capacity of 1750 lbs (795 kg).
3. LCD display measures in lbs. or kg for each wheel and the total vehicle weight.
4. LCD display indicates percentage (%) weight of each wheel relative to the total vehicle weight.
5. LCD display indicates:
 - a. Cross weight percentage loads
 - b. Side to Side weight percentage loads
 - c. Front to Rear weight percentage loads.
6. LCD display indicates battery level for individual pads and LCD display.
7. LCD display and control buttons have a backlighting feature
8. Pads not on will be displayed as OFF on LCD Display.
9. Battery power level indicator for LCD display and each individual pad.
10. LCD display and weighing pads operate with AA batteries (included).
11. Scale pads and LCD display fit into a foam lined hard case with wheels and telescoping handle.

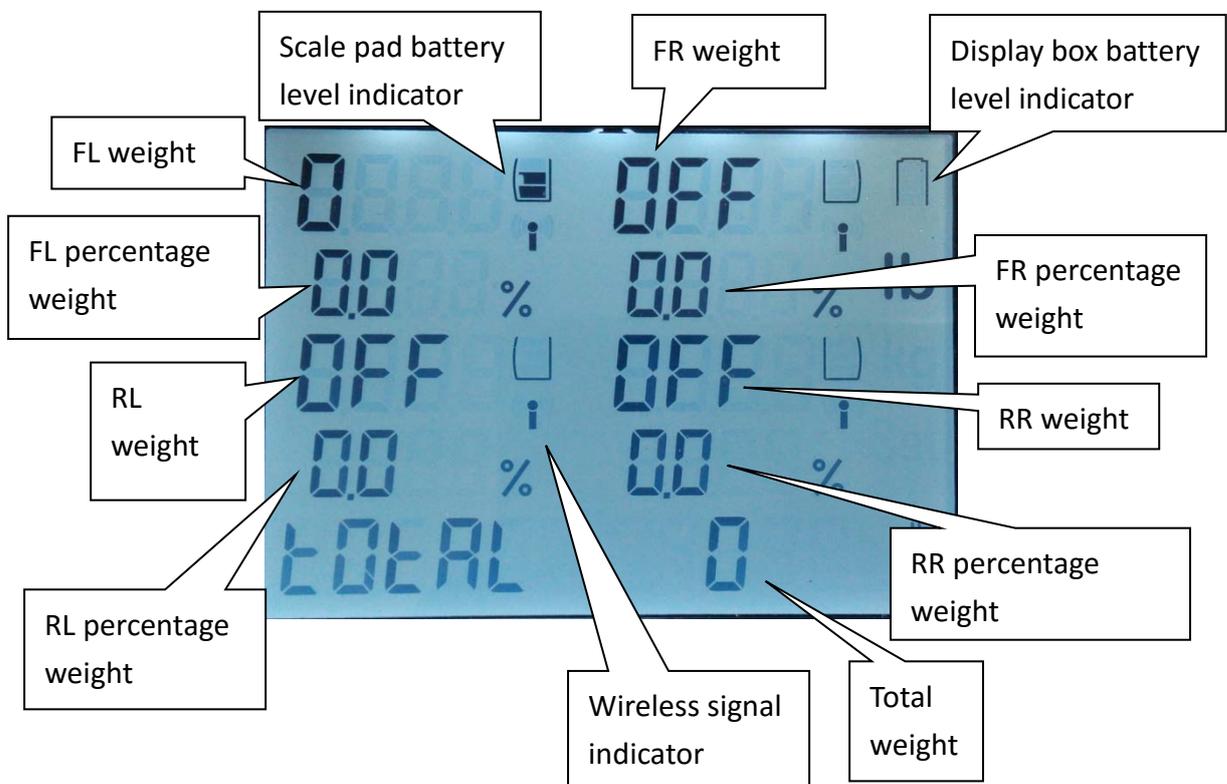

LCD display format

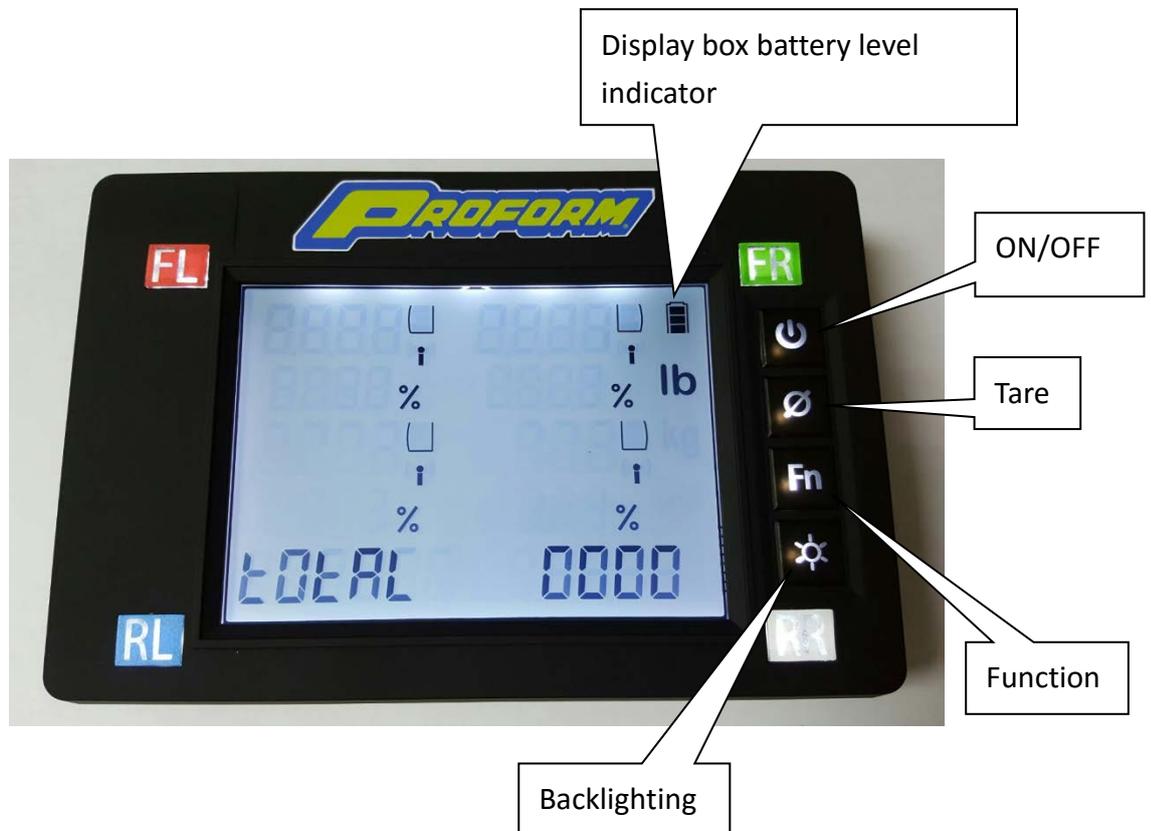

Using the LCD Display

Operating instructions.

1. Open the LCD display box, insert 4 AA batteries into the battery pack.
2. Open the battery door of each weighing pad, and insert 2 AA batteries into the battery pack.
3. Power on each weighing pad by switching the small switch from '0' to '1' near the handle of each pad.
4. The LED light next to the pad's handle should light up. If it looks dim or does not light up, replace with 2 new AA batteries.
5. Make sure that the correct pad is positioned in front of the corresponding wheel: FR, FL, RR, and RL - **F**ront **R**ight, **F**ront **L**eft, **R**ear **R**ight, and **R**ear **L**eft. The handle of each weighing pad should be facing outward toward the side of the car.

6. Power on the LCD display by pressing the “On/Off” button. Wait until the weight readings all show zero or press the “Tare” button to zero. Press “Function” to toggle between lbs and kgs.
7. The battery power indicator represents the amount of battery life available in 3 levels. If the display shows only the battery outline, replace the AA batteries accordingly.
8. Using jacks carefully lower each wheel onto the center of the weighing pads, or carefully drive the vehicle up onto the center of the weighing pads. The more centered each wheel is on the pad, the more accurate the reading will be.
9. Never press “Tare” if the vehicle is on the pads, otherwise the vehicle has to be removed and the scale must be zeroed again.
10. While the car is on the pads. Shake each of the corners of the car up and down to relieve any residual stress or friction within the chassis.
11. The car total weight, individual weight of each wheel as well as its percentage to the total weight will be shown on the default screen. (**Screen #1**)

Toggling between screens:

12. Press and hold the “Function” button with one finger, press the “Tare” button once. The display passes to **Screen #2**, which displays the total Front and Rear weight percentages.
13. Press and hold the “Function” button with one finger, press the “Tare” button again, and the display will pass to **Screen #3**, which displays the total Left and Right weight in percentages.
14. Press and hold the “Function” button with one finger, press the “Tare” button again, and the display passes to **Screen #4**, which displays the Cross weight of (LF) Left Front, and (RR) Rear Right percentage.
15. Press and hold the “Function” button with one finger, press the “Tare” button again, and the display passes to **Screen #5**, which displays the Cross weight of (RF) Right Front, and (LR) Left Rear percentage.
16. It is possible to scroll through the screens, but pressing and holding “Function”, while repeatedly pressing the “Tare” button.
17. Press ON/OFF to power off the unit.
18. Switch off all the weighing pads, and make sure the LED lights are all off.




Screen #1




Screen #2

Fr: Front weight percent
Rr: Rear weight percent

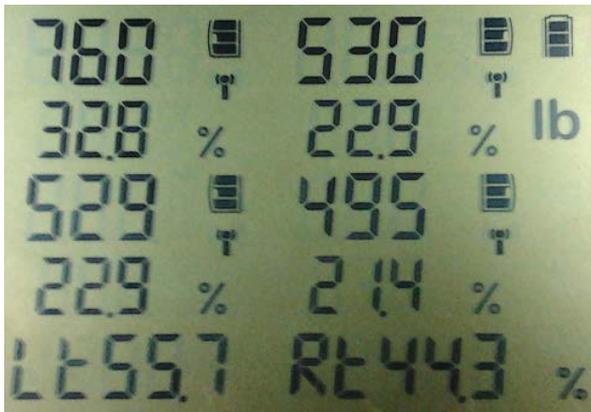

Screen #3

Lt: Left total percent
Rt: Right total percent

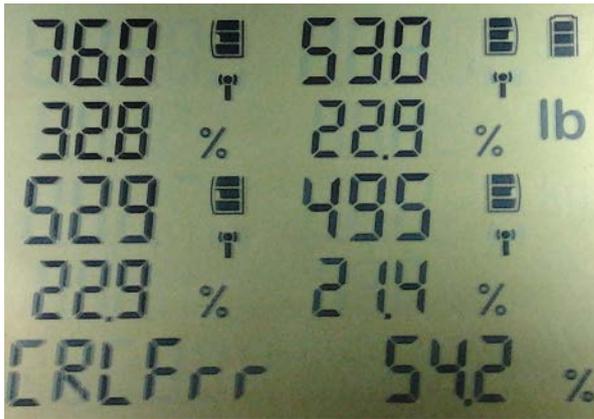

Cross LF: Left Front, RR: Right Rear percent

Screen #4



Cross RF: Right Front, LR:Left Rear percent

Screen #5



For more information, please visit www.proformparts.com or call our tech team (586)774-2500
9:00 a.m. to 5:00 p.m. EST. Email: tech@proformparts.com

Specialty Auto Parts USA, Inc. | 26708 Groesbeck Hwy. | Warren, MI 48089

© 2016 Specialty Auto Parts USA, Inc. All Rights Reserved.