



Part No. ALL10105
ALL10106
ALL44028

Bead Breakers

Convenient tool makes quick work of breaking down even the most stubborn tire beads. Durable steel construction with rubber hand grips. Standard and wide jaw breakers are for use with most 15" wheels. The adjustable arm version ALL44028, allows bead breaker to be used on most 10", 13" or 15" wheels simply by changing the length of the arm. Wide jaw bead breaker works well with soft sidewall tires helping prevent damage to sidewall. Clamp the hook and inside jaw against the rim, while maintaining slight pressure on the outside handle press down on the inside handle using the outer jaws to separate the tire from the rim, moving around the rim as needed.

| Part No. | Description |
|-----------------|--------------------|
|-----------------|--------------------|

| | |
|---------------|---------------------------|
| ALL10105..... | Standard-Jaw Bead Breaker |
|---------------|---------------------------|

| | |
|---------------|--|
| ALL44028..... | Standard-Jaw Bead Breaker w/Adjustable Arm |
|---------------|--|

| | |
|---------------|-----------------------|
| ALL10106..... | Wide-Jaw Bead Breaker |
|---------------|-----------------------|




ALL10105



ALL44028



ALL10106

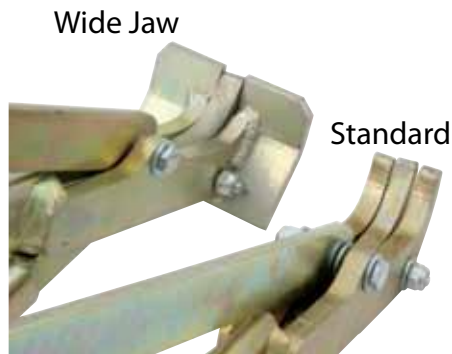

Wide Jaw

Standard