

## **Tail Shaft Seal And Bushing**

The tail shaft bushing is a regular wear item, located inside the transmission tailshaft housing. It should be replaced when replacing a tailshaft seal or when a driveshaft failure has occurred. A worn bushing will cause excessive side-to-side movement of the slip yoke and create a vibration or leak. Bushing and seal fit GM Powerglide, Turbo 350, Saginaw, Muncie, Bert and Brinn transmissions.

ALL72150......Seal ALL72152.....Seal With Bushing





Allstar Performance 8300 Lane Dr., Watervliet, MI 49098 Phone: (269) 463-8000 Fax: (800) 772-2618 www.allstarperformance.com