
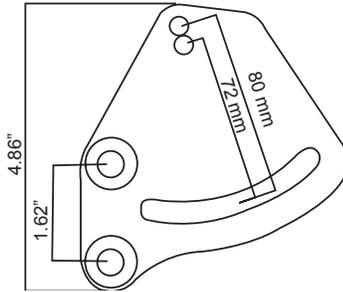



Small Block Chevrolet Brackets

Chevrolet small block brackets fit 350ci. engines. The head bracket mounts to the drivers side cylinder head, while the block bracket mounts to the lower drivers side of the engine.

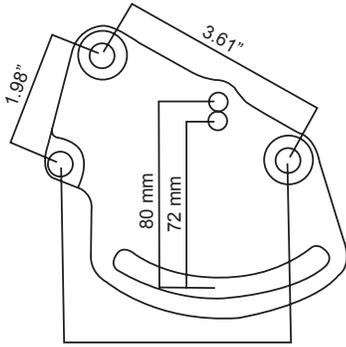


Small Block Dodge Bracket

Dodge brackets will fit most 340ci. and 360ci. Mopar blocks.

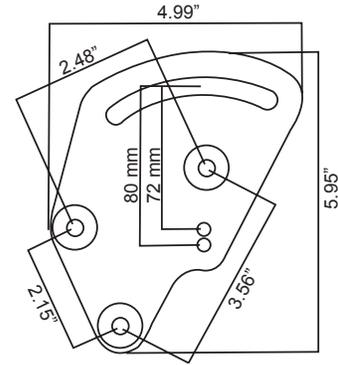


Big Block Chevrolet Brackets


Chevrolet big block brackets will fit most 396ci., 402ci., 427ci., 502ci. and 572ci. engines. Three brackets are available, one for each cylinder head, as well as one for the driver's side block.

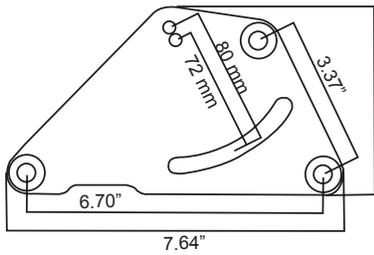

Big Block Chevrolet Left/Driver Cylinder Head

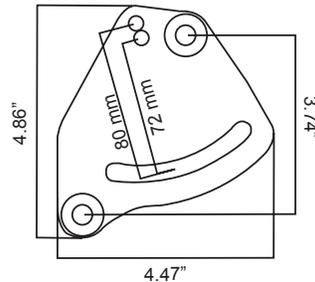


Big Block Chevrolet Left Block

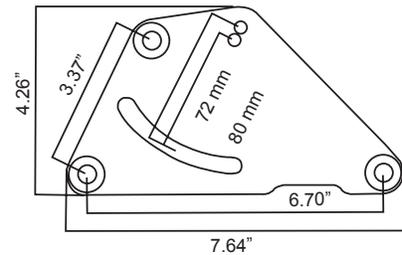


Big Block Chevrolet Right/Passanger Cylinder Head

Ford Brackets


Ford head mounting bracket kits, **KRC 31611000** and **KRC 31621000**, will fit several head bolt patterns. Refer to the four drawings to the right to see if they will work in your application. Bolt patterns for both brackets are the same. Bracket **KRC 31611000** will fit short deck 260ci., 289ci. and 302ci. (8.2" - 8.7" deck height) blocks no matter which head is bolted to the block. Bracket **KRC 31621000** is the same except it fits all tall deck 351ci. or 400ci. blocks (9.2" - 9.5" deck height)

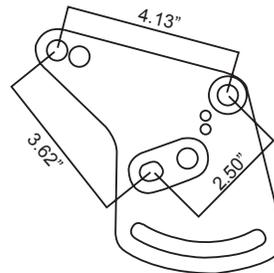


Old 302-351 Windsor Head Bolt Pattern

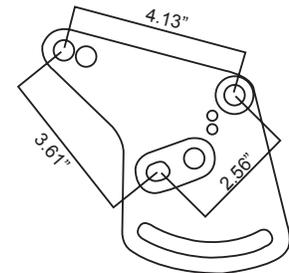


New 302-351 Windsor Head Bolt Pattern

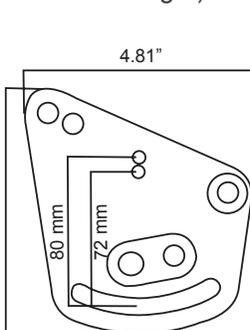


351 ci.-400ci.
With 9.2"-9.5" Deck Height

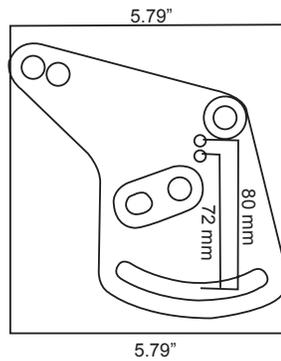

260ci.-289ci.-302ci.
With 8.2"-8.7" Deck Height

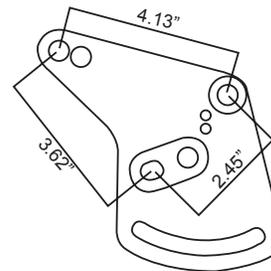

351N Sportsman Head Bolt Pattern

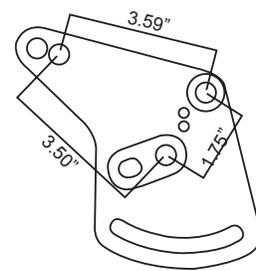

351 Cleveland Head Bolt Pattern