



## TCI® 932500 Trim Data Sheet

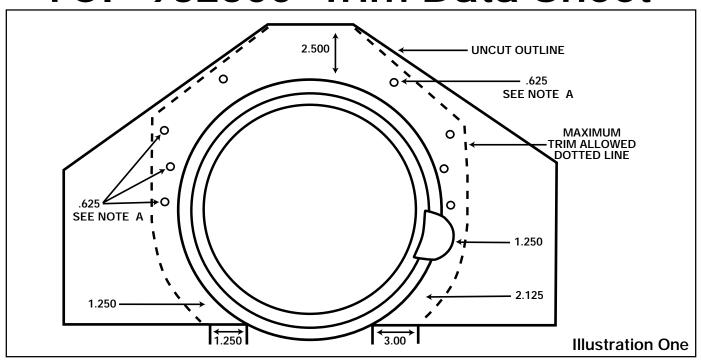


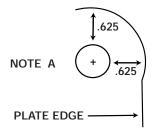

DO NOT TRIM LESS THAN .625 FROM ANY HOLE EDGE TO OUTSIDE OF PLATE!! N.H.R.A. Accepted Starter Hole
Do Not Trim Border Less Than 1.250
From Edge of Stamped Outer Ring

Trim only with Bandsaw Do Not Use Heat or a Flame

If you trim too far you will not pass tech inspection and lose product safety!!!

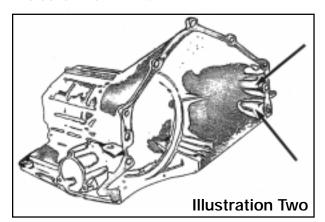

Note: Works only with small bolt pattern torque converters. If during installation your flexplate shield does not fit properly inside the transmission bellhousing you may need to modify the transmission case bellhousing. We have seen this condition with some of the

Turbo 350 and Powerglide cases. Removal of up to .200 inches of material per side may be necessary. (See Illustration Two)

Venture Products International Patent No. USA 5,184,524.

